361-501	EASY	RIDER	(MUSTANG)
361-502	EASY	RIDER	(PONY)
361-503	EASY	RIDER	(ZEBRA)
361-504	EASY	RIDER	(BRONCO)

Page 1 Rev 06/17/03

## \* IMPORTANT \*

PLEASE RETAIN THIS INSTRUCTION SHEET IN YOUR FILES. IT CONTAINS IMPORTANT REPLACEMENT PARTS INFORMATION. ALL EQUIPMENT SHOULD BE INSTALLED IN ACCORDANCE WITH THESE INSTRUCTIONS.

IT IS IMPORTANT TO USE AND MAINTAIN ALL PUBLIC PLAYGROUND EQUIPMENT PROPERLY. PLAYGROUND EQUIPMENT WHICH IS IMPROPERLY MAINTAINED CAN CAUSE SERIOUS INJURY. PERIODICAL INSPECTIONS, MAINTENANCE, REPAIR AND/OR REPLACEMENT OF DAMAGED PARTS IS NECESSARY FOR SAFE OPERATION OF EQUIPMENT AND SAFETY OF USERS. <u>RESILIENT SURFACING</u> SHOULD BE USED UNDER ALL PLAYGROUND EQUIPMENT. APPROPRIATE PUBLICATIONS, AVAILABLE AT <u>NO CHARGE</u>, FROM THE CONSUMER PRODUCT SAFETY COMMISSION, INCLUDE "A HANDBOOK FOR PUBLIC PLAYGROUND SAFETY." YOU CAN RECEIVE YOUR FREE COPY BY CALLING 1-301-504-7908



1	CTN		1 Hardware	Bag				
			1 363-001	Mustang				
1	PC	-	1 363-950	Spring Assy	•			
		P	ACKING LIST	for 361-502	Note:	Ha	ardware Bag	g is the same for all Packir
1	CTN	- 1	Hardware	Bag		L	ists.	
		- 1	363-002	Pony				
1	PC	- 1	363-950	Spring Assy.				HARDWARE BAG
					4	-	116-506	5/16" x 1 ½" Hex Hd Bolt
		Р	ACKING LIST	for 361-503	4	-	196-644	3/8" x 8" Anchor Bolt
1	CTN	- 1	Hardware	Bag	8	-	316-501	5/16" Flat Washer
		- 1	363-003	Zebra	4	-	226-501	5/16" Lock Nut
1	PC	- 1	363-950	Spring Assy.	4	-	226-601	3/8" Lock Nut
					4	-	216-601	3/8" Hex Nut
		P	ACKING LIST	for 361-504	4	-	316-601	3/8" Flat Washer
1	CTN	- 1	Hardware	Baq	1	-	805-532	Warning Label
		- 1	363-004	Bronco	1	_	805-534	SportsPlay Label
L	PC	- 1	363-950	Spring Assy.	1	-	Maintenar	nce Checklist
			1 CTN	1 PC	2 TOTAL PCS		WT 56#	CLASS 70

361-501	EASY	RIDER	(MUSTANG)
361-502	EASY	RIDER	(PONY)
361-503	EASY	RIDER	(ZEBRA)
361-504	EASY	RIDER	(BRONCO)


Page 2 Rev 06/17/03

# GENERAL USE/FALL ZONE & FOOTING RECOMMENDATIONS

STATIONARY & PORTABLE EQUIPMENT - USE/FALL ZONES SHOULD EXTEND A MINIMUM OF 6 FEET IN ALL DIRECTIONS FROM THE PERIMETER OF THE EQUIPMENT GROUND SPACE. THIS AREA SHOULD BE COVERED WITH THE REQUIRED AMOUNT OF <u>RESILIENT SAFETY SURFACING MATERIAL</u>. FOR SOME EQUIPMENT -USE/FALL ZONES CAN OVERLAP. SEE CONSUMER PRODUCT SAFETY COMMISSION GUIDELINES. DIAMETER & DEPTH OF FOOTINGS ILLUSTRATED ARE SATISFACTORY IN MOST APPLICATIONS FOR PIPE SIZES UP TO 2 3/8" DIAMETER. VARYING SOIL & CLIMATIC CONDITIONS MAY REQUIRE DEEPER & HEAVIER FOOTINGS IN SOME AREAS. CHECK LOCAL BUILDING CODES.




\* If resilient surfacing is to be less than 12", then additional pipe should be put in concrete to maintain proper finish grade for equipment.

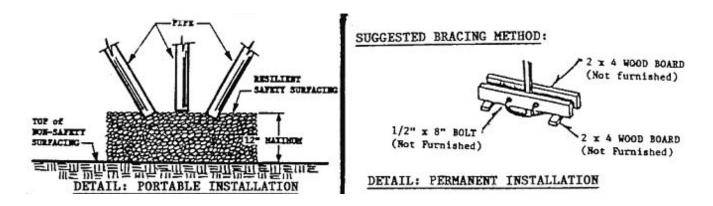

361-501	EASY	RIDER	(MUSTANG)
361-502	EASY	RIDER	(PONY)
361-503	EASY	RIDER	(ZEBRA)
361-504	EASY	RIDER	(BRONCO)

Page 3 Rev 06/17/03

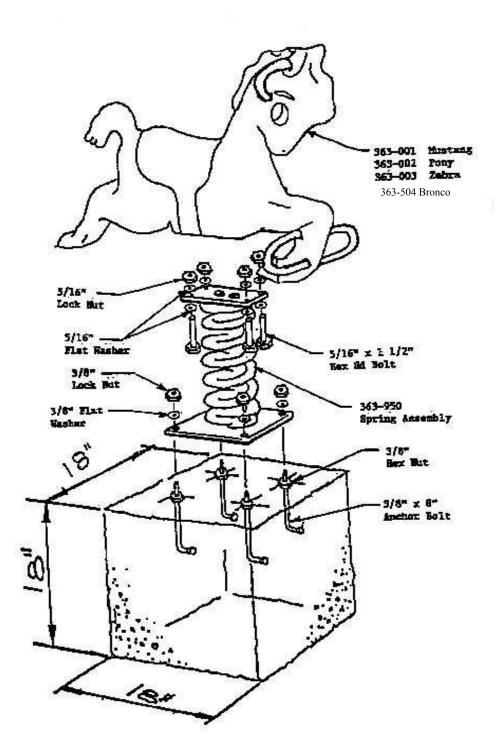

361-501	EASY	RIDER	(MUSTANG)
361-502	EASY	RIDER	(PONY)
361-503	EASY	RIDER	(ZEBRA)
361-504	EASY	RIDER	(BRONCO)

Page 4 Rev 06/17/03

#### GENERAL ASSEMBLY INSTRUCTIONS:

Check all the parts and hardware with the packing list to be sure you have received everything needed to assemble this product. <u>CONTACT YOUR LOCAL DISTRIBUTOR WITH</u> <u>NOTIFICATION OF ANY MISSING OR DAMAGED PARTS.</u> Contact must be made within ten days of receipt of your order.


Only hand-tighten nuts & bolts on initial assembly. Final tightening should be done EVENLY after final assembly when unit has been plumbed & leveled. After assembly is complete, ANY ENDS OF BOLTS PROTRUDING BEYOND NUTS SHOULD BE CUT OFF AND/OR PEENED OVER TO REMOVE ANY SHARP EDGES. Go over entire unit to file smooth any sharp edges or projections that may have been caused by rough handling in shipping or installation. T-Clamps are designed for both one and two bolt connections. In many situations only one bolt is required. See specific assembly instructions. On products with platforms install 1 - 2 degrees off level to facilitate water drainage.

## GENERAL MAINTENANCE INSTRUCTIONS:

Check MONTHLY for loose bolts, damaged or broken parts. Tighten and/or replace immediately.

### SPECIFIC ASSEMBLY INSTRUCTIONS:

- STEP #1: Dig footing hole & fill with concrete. (Approx. 3.5 cubic feet.)
- STEP #2: Before concrete sets, assemble anchor bolts to bottom plate of spring with a
  Hex Nut & Lock Nut.
- STEP #3: Push this assembly down into the wet concrete until plate is level with top of concrete.
- STEP #4: After concrete hardens for at least 48 hours, bolt pony in place. Add resilient surfacing.
- STEP #5: IMPORTANT: After equipment has been in use for three or four days, all bolts & nuts must be checked and retightened if necessary.
- STEP #6: Attach Warning Label and Manufacturer's Identification Label to a clean surface. The Labels should be attached in a location where they are clearly visible and legible and away from normal hand and foot placement areas. The Labels must be replaced if they become illegible, destroyed or removed. Contact your distributor for replacement Labels.

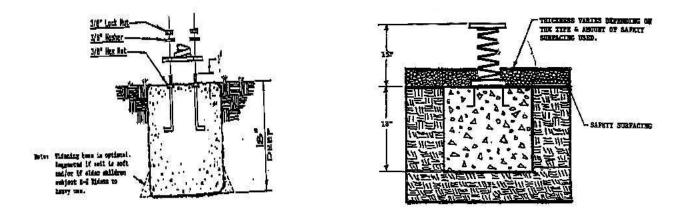

361-501	EASY	RIDER	(MUSTANG)
361-502	EASY	RIDER	(PONY)
361-503	EASY	RIDER	(ZEBRA)
361-504	EASY	RIDER	(BRONCO)

Use Zone: Maintain a 6' perimeter around Easy Rider

**Specification:** All Easy Rider ponies shall be molded from 319 SR molten aluminum forged at 1400 degrees F. Rider shall be painted with polyester powder coat paint that has been electrostatically applied. All easy riders will carry a lifetime warranty

Page 5 Rev 06/17/03