


Concrete Wall Installation:


- 1** Drill a hole in the base material using a 3/8" diameter masonry bit. Drill the hole to 1" depth. Blow the hole clean using compressed air.
- 2** Insert Drop-In anchor into hole. Tap with hammer until flush against surface.
- 3** Using the Drop-In setting tool, drive expander plug towards the bottom of the anchor until shoulder of setting tool makes contact with the top of the anchor.
- 4** Place rack and screw anchor into wall.

Caution: Oversized holes will make it difficult to set the anchor and will reduce the anchor's load capacity.

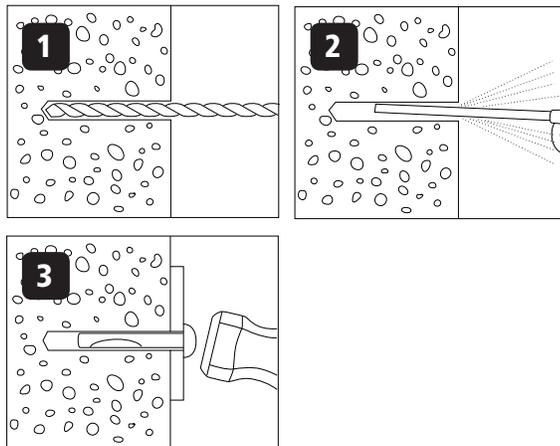

Concrete Block Installation:

- 1** Drill a hole in the base material using a 1/4" diameter masonry bit.
- 2** Blow the hole clean using compressed air.
- 3** Place rack and hammer anchor into wall.

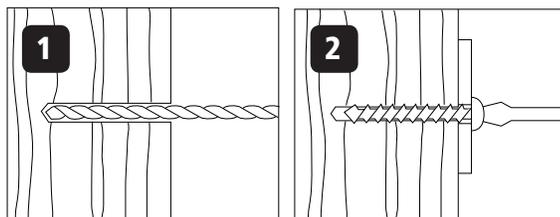

Wood Stud Installation:

- 1** Drill small pilot holes into wood studs. Drywall alone is not sufficiently strong to support loaded rack.
- 2** Place rack and use provided wood screws to secure to wall.